

DBR ATV

APEX NERF BAR INSTALLATION INSTRUCTIONS

Install main mounts Part 1 and 2 using 4 of the 8x1.25 x 25mm JIS Bolts.

Install front mounts Part 3 and 4 using the remaining 4 - 8x1.25 x 25mm JIS bolts.

Install rear heel guard mounts Part 5 and 6 using the 4 - 6x1 x 16mm JIS bolts.

Keep all mounts loose at this time.

Slide left and right nerf bars onto mounts. Parts 7 and 8.

Slide left and right heel guards onto mounts. Parts 9 and 10.

Using 2 - 1/2-13 SHCS and 2 - antivibe washers attach the heel guards to the nerf bars.

Install Footpegs Part 11 and 12 Using 6 - 1/4-20 x 3 Gr8 Bolts Washers and Nuts.

Tighten Everthing - ***Using Torque Specs Below***

Once everthing is tightened you will need to drill your mount holes.

We do not drill mounting holes due to variants in the frames.

To drill holes use a $\frac{17}{64}$ drill bit and measure in about 1" on each mount point.

You will drill through the aluminum and steel at the same time.

Inserting a bolt as you go.

Thread nets using the diagram.

Torque Specifacaitons -


1/2-13 - 50 ft lbs


8x1.25mm - 25 ft lbs

6x1.25mm - 11.5 ft lbs

1/4-20 - 12 ft lbs

Always Inspect Hardware Before Each Ride

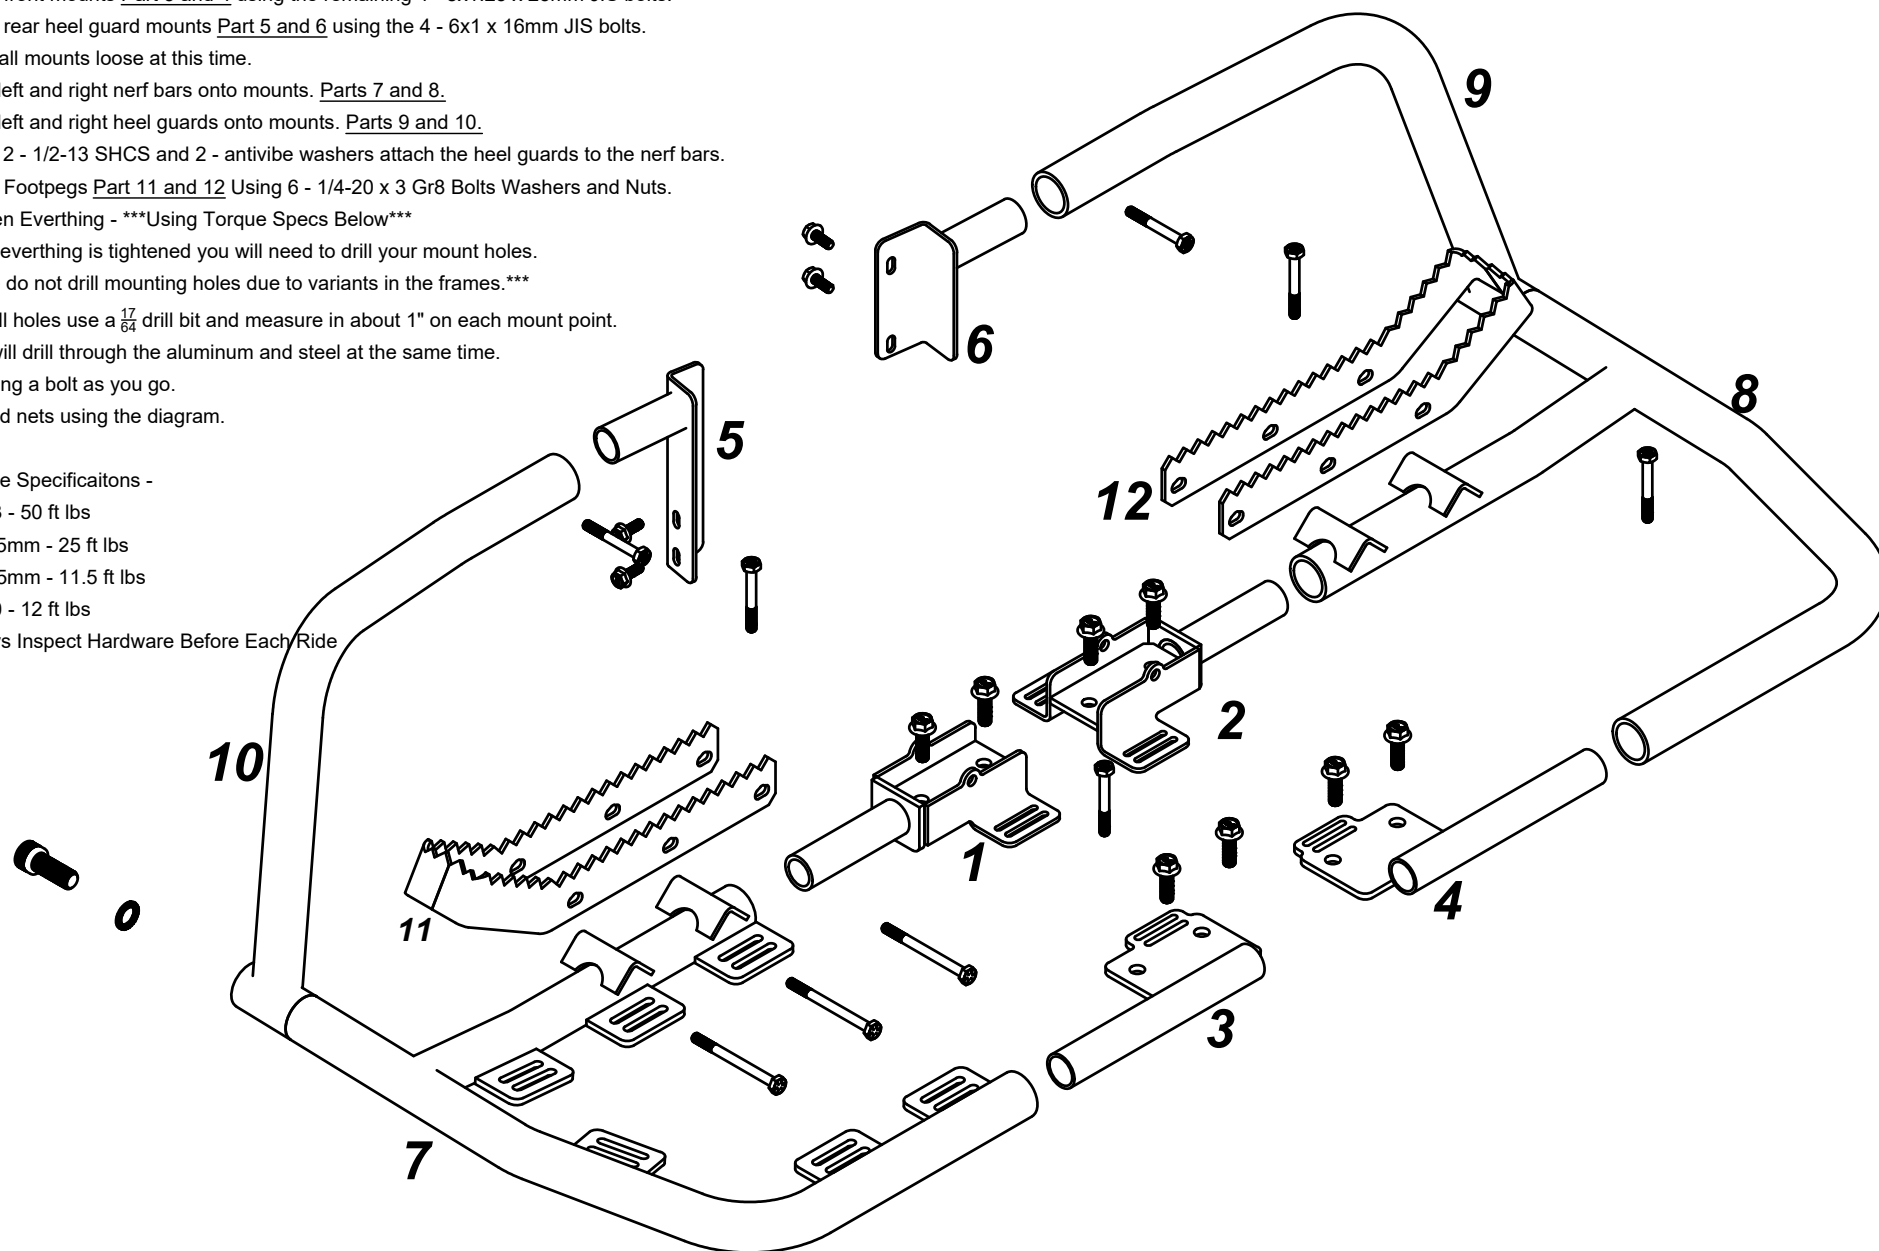


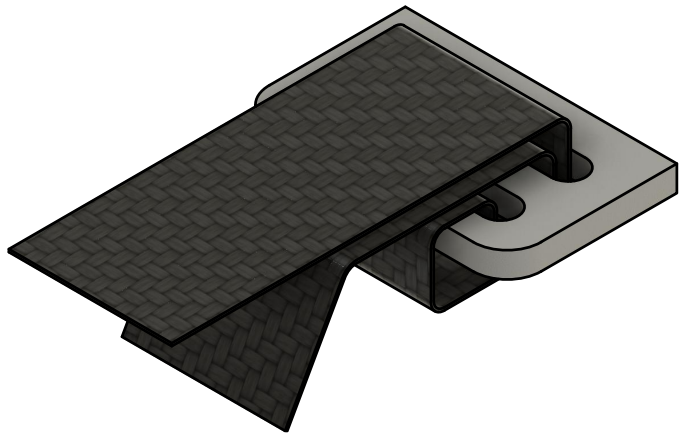

THANK YOU FOR YOUR PURCHASE
OF DBR NERF BARS!

WE PRIDE OURSELVES IN TOP
QUALITY PRODUCTS AND OUR NETS
ARE SECOND TO NONE!

THIS DRAWING SHOWS HOW TO
INSTALL OUR NETS.

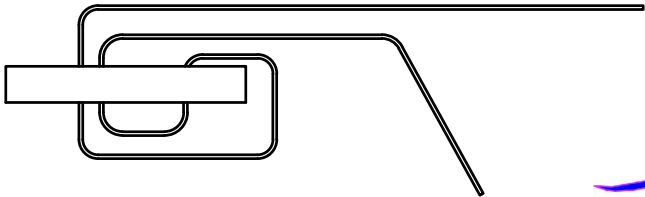

		PROJECT			
		DBR			
		TITLE			
		Net Install Instructions			
APPROVED		SIZE	CODE	DWG NO	REV
CHECKED		A			
DRAWN	Chris Borning	6/14/2024	SCALE 1:1	WEIGHT	SHEET 1/1